




model argoflex

INSTRUCTIONS FOR USE

Loading.....	4-7
Shutter Adjustment.....	8-9
Lens Adjustment.....	8-9
Focusing.....	10
Depth of Field.....	11
Taking the Picture.....	12-13
Close-Ups.....	14-15
Winding the Film.....	16
Unloading.....	16
Double Exposure Prevention.	17
Taking Flash Pictures.....	18-21


model argoflex

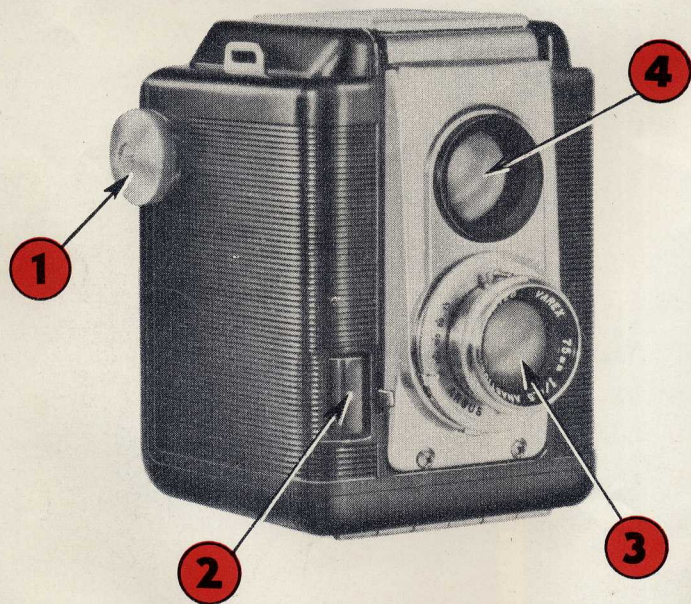

Model Argoflex is a modified twin lens type camera with a large brilliant viewing screen. Like other Argoflex models, it shows you the picture before you take it. In operation, it is as easy to use as the most simple box camera but has a lens which permits picture taking indoors or outdoors, in cloudy or bright weather. Advanced features usually reserved for expensive cameras, like built-in flash and double exposure prevention, are representative of the advanced design of the Model Argoflex.

To obtain the utmost from your Model Argoflex, read this instruction book carefully so you will thoroughly understand its operation.

- 1 Film Winding Knob**
- 2 Shutter Release**
- 3 Taking Lens**
- 4 Viewing Lens**
- 5 Locking Catch**
- 6 Film Window**
- 7 Flash Contacts**

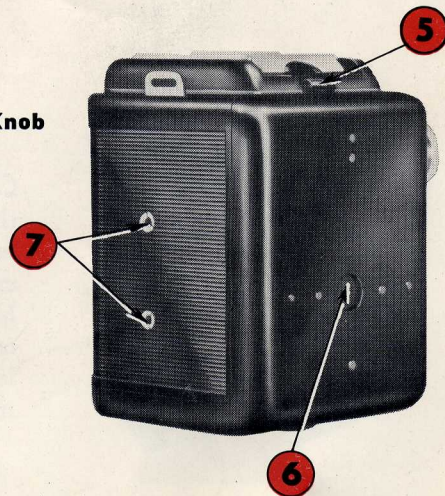

LOADING

Use Only 620 Size Film

Due to its splendid lens and shutter equipment, the Model Argoflex permits use of any type of black and white or color film, the selection being governed by the type of pictures you want to take.



1

Open the back of the camera by lifting up the locking catch. The back is hinged for convenience but do not let it drop or hinge may be sprung.




2

Place empty film spool in upper film compartment, first making sure film spool slot is engaged with winding knob; then press other end of spool in place.

3

Be sure to load the camera in subdued light; not in bright sunlight. Insert roll of film in lower film compartment and slide into place engaging spool pins. Be sure film is inserted with end of protective paper in position indicated.

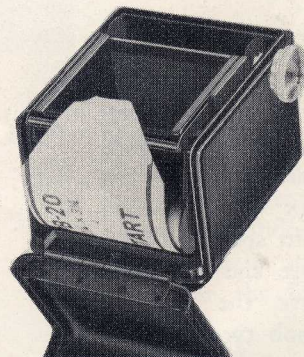



4

Pull off about six inches of paper leader for threading.


5

Fold end of paper (about one inch) and insert into long slot of the empty film spool. To secure end of paper, give the winding knob two or three turns.



6

Close camera back, making sure it is securely closed and locked.

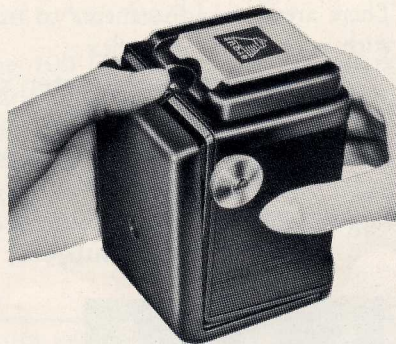


7

Turn film winding knob until Figure 1 appears in the center of the red window. The camera is now ready for the first picture.




There are three adjustments to make in taking pictures with your Model Argoflex:

1. **Adjust the shutter speed according to the type of subject.**
2. **Adjust the lens according to the light condition.**
3. **Focus the camera, according to the distance of the subject.**

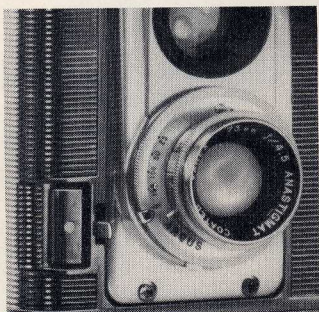

To adjust the shutter, place the movable indicator opposite the speed desired. (See Exposure Guide on opposite page.)

To adjust the aperture (lens opening) turn slide pointer to a position opposite the desired f number. (See Exposure Guide.)

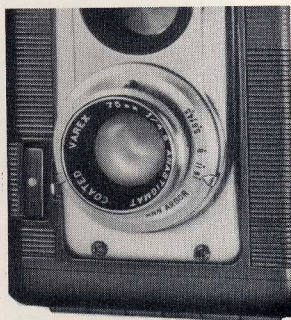

UNIVERSAL SETTING

Shutter speed marking 100 (1/100 second), lens marking f:8, and focus marking 25 are all indicated with red figures. By pre-setting your Model Argoflex at these markings, the camera is properly set for all average pictures in bright sunlight. For other conditions, cloudy weather or unusual subjects, follow the handy guide below.

OUTDOOR EXPOSURE GUIDE

For Average Fast Film Like Kodak Plus X, ANSCO Supreme, etc.


Subject	Brilliant	Bright	Cloudy-Bright	Cloudy-Dull
Beach, Water and Snow Scenes; Distant Landscapes.	Shutter 1/100 Lens f:16	1/100 f:11	1/100 f:8	1/100 f:5.6
Close-ups in Beach, Water and Snow Scenes; Landscapes with Foreground.	1/100 f:11	1/100 f:8	1/100 f:5.6	1/100 f:4
Pictures of People, Children at Play, Gardens, Houses, Street Scenes.	1/100 f:8	1/100 f:5.6	1/100 f:4	1/50 f:4
All Subjects in Open Shade; Not Under Trees or Porches.	1/100 f:5.6	1/100 f:4	1/50 f:4	1/25 f:4

For color see instructions supplied with film
For indoor pictures see instructions supplied with flood and flash bulbs

FOCUSING

Focusing the Model Argoflex is accomplished by rotating the front lens mount until the distance selected is opposite the index marker at the top of the mount. All markings are in feet, and the 25-foot marking is in red. When used with red lens and shutter settings, this is the universal focus position for all average pictures of subjects beyond 12 feet.

On the facing page, tables are provided to indicate the range of sharpness at all combinations of lens and focus settings.

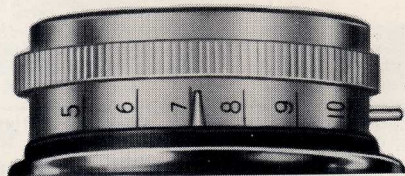

DEPTH OF FIELD


The table below shows the range of sharpness at every lens and focus setting. For example: With your camera focused on 15 feet and the lens set at f:11, all subjects between 8 feet and 111 feet will be in sharp focus.

F:4.5-75 mm.

Circle of confusion .004"


Distance Focused on in feet	f:4.5		f:5.6		f:8		f:11		f:16		f:22	
∞	42'	∞	33'	∞	23'	∞	17'	∞	11'9"	∞	8'6"	∞
50	23'	∞	20'	∞	16'0"	∞	12'9"	∞	9'6"	∞	7'4"	∞
25	15'8"	62'	14'4"	96'	12'2"	∞	10'2"	∞	8'0"	∞	6'5"	∞
15	11'1"	23'2"	10'5"	27'	9'2"	40'	8'0"	111'	6'8"	∞	5'6"	∞
10	8'1"	13'	7'9"	14'1"	7'1"	17'1"	6'4"	23'4"	5'6"	59'	4'8"	∞
8	6'9"	9'10"	6'6"	10'5"	6'0"	11'11"	5'6"	14'8"	4'10"	24'	4'2"	88'
7	6'0"	8'4"	5'10"	8'9"	5'5"	9'10"	5'0"	11'7"	4'5"	16'6"	3'11"	34'
6	5'3"	7'0"	5'1"	7'3"	4'10"	7'11"	4'6"	9'1"	4'0"	11'9"	3'7"	18'5"
5	4'6"	5'8"	4'5"	5'10"	4'2"	6'3"	3'11"	6'11"	3'7"	8'5"	3'3"	11'4"
4	3'8"	4'5"	3'7"	4'6"	3'5"	4'9"	3'3"	5'2"	3'0"	5'11"	2'9"	7'2"
3.5	3'3"	3'10"	3'2"	3'10"	3'1"	4'1"	2'11"	4'4"	2'9"	4'10"	2'6"	5'8"

TAKING THE PICTURE

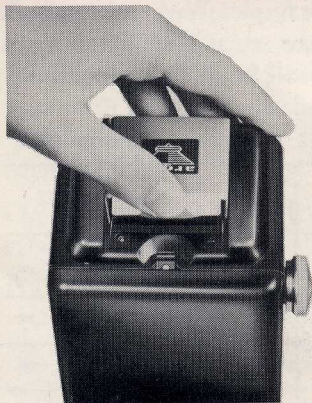

Open the reflecting view-finder hood, using the thumb as indicated.

The brilliant view-finder shows you the way the picture will look on the film.

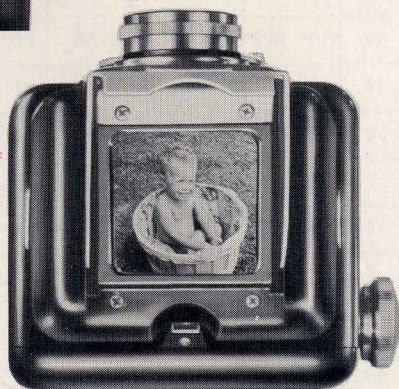

To take the picture, hold the camera as illustrated above, and compose the subject in the view-finder as you want it to appear in the finished picture. A lower or higher camera position may be desirable to get just the effect you want. Then, hold your breath for an instant and squeeze the shutter release *smoothly* with the right fore-finger. Be sure to press release as far as it will go, before removing finger. Take care not to jar the camera or the picture may be blurred due to camera movement.

CLOSE-UPS

Model Argoflex may be focused for close-up pictures at a distance of $3\frac{1}{2}$ feet. When it is necessary or desirable to photograph a subject from a closer position use Argus optical glass portrait and copy lenses.

A selection of three such lenses provide a wide range of utility in close-up photography.

- 1D Portrait lens for pictures at 19-40 inches
- 2D Copy lens for pictures at 13-20 inches
- 3D Copy lens for pictures at 10-13 inches

The lenses are supplied unmounted, 30 mm. in diameter and an Argus adapter ring, size 30 mm., holds them in place on the camera lens.

Caution: When using portrait or copy lenses check distances carefully with a tape measure or rule. Full instruction are supplied with each lens.

Ask your Argus Dealer to show you these useful lenses.




Taken at $3\frac{1}{2}$ feet,
no portrait lens



Taken at 18 inches, using
Portrait 2D lens

WINDING FILM

After each picture is taken, wind until the next figure appears in the center of the red window. After all 12 pictures have been taken, wind about 6 turns to take up film and protective paper.

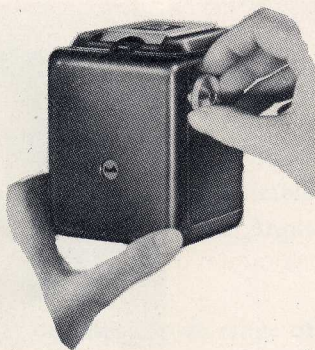


UNLOADING FILM

Open the back of the camera by lifting the locking catch, and lift out the roll of exposed film.

DOUBLE EXPOSURE PREVENTION

An unusual feature of Model Argoflex is double exposure prevention. This means you cannot accidentally take two pictures on the same film. After taking a picture, the shutter release is locked and another picture cannot be taken with Model Argoflex until the film is wound. This invaluable feature will eliminate one of the most common amateur mistakes.

If it is desired to intentionally take a double exposure, for trick effects, this can be accomplished by means of a small lever on the front of the camera. When pressed upward, it re-sets the shutter for a second picture without the need for winding the film.


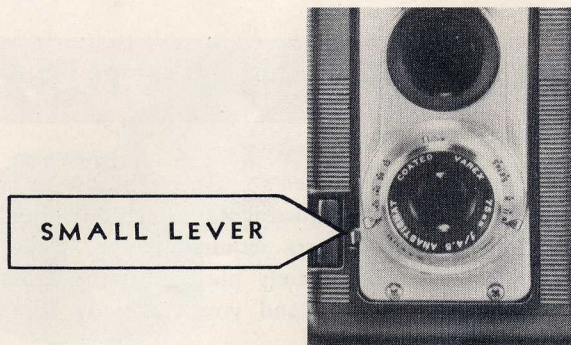




TAKING FLASH PICTURES

Model Argoflex may be used to take pictures with flash bulbs without special adjustment. Synchronization is built-in, and the only extra required is the Argus 76 Flash Unit. This unit merely plugs into the camera, like plugging in a lamp and you are ready to take flash pictures.

To attach Flash Unit to the camera, insert flash contact pins into the holes on the side of the camera. The camera is automatically synchronized. Caution: do not have a flash bulb in Flash Unit when attaching.

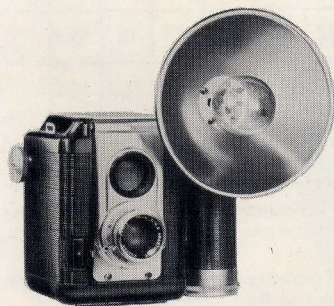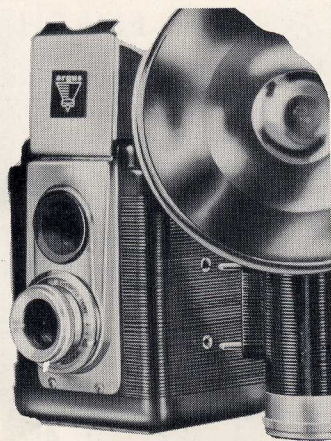

It is recommended that the film be advanced before flash bulb is inserted. After attaching Flash Unit to the camera, a flash bulb may be inserted in it. Clean flash bulb contact. Push bulb in as far as it will go.

FLASH TABLES

When taking flash pictures with the Model Argoflex, General Electric SM or Sylvania (Wabash) SF flash bulbs, the shutter may be set at any speed. Other flash bulbs of the wire-filled type may be used with the shutter set at 25 (1/25 second) only. This speed is marked in green as a reminder. Refer to the Table below for proper lens settings.

Flash Bulb		Shut- ter Speed	Distance in Feet							
Sylvania	G.E.		3.5	4	5	6	8	10	15	25
SF	SM	1/25		f22	f16	f16	f11	f8	f5.6	
SF	SM	1/50		f22	f16	f16	f11	f8	f5.6	
SF	SM	1/100		f22	f16	f16	f11	f8	f5.6	
SF	SM	1/150	f22	f16	f11	f11	f8	f5.6	f4.5	
Press 25	S.P.#5	1/25				f22	f22	f16	f11	f5.6


All figures are based on use of Kodak Verichrome, Plus X or Ansco Supreme roll film. For other films, refer to instructions furnished with flash bulbs, available from your Argus Dealer.

Caution: Do not use flash bulbs in an explosive atmosphere. Use of a transparent, protective screen is recommended as flash bulbs may shatter.



To take pictures with flash, check the distance to be sure you are neither too close nor too far, and follow the instructions on page 20.


After the flash picture is taken, the flash bulb may be ejected automatically by pressing the red button at the top of the Flash Unit. This prevents burned fingers.

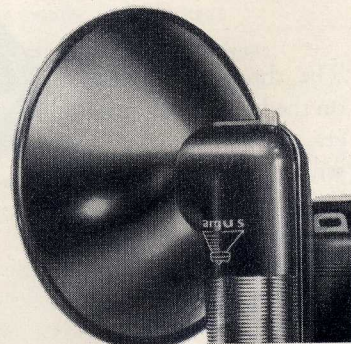




To protect Model Argoflex, a genuine leather carrying case is provided as an accessory. It is designed to permit use of the camera without removal, including use of the flash unit.

The threaded bushing on the base of the camera permits the use of any standard tripod with Model Argoflex. It is a useful accessory for time exposures.

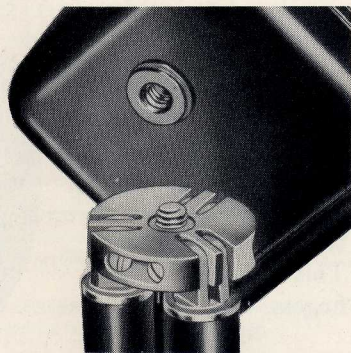

FILTERS

To obtain beautiful natural pictures, use Argus Optical Glass Filters for improving the rendering of clouds in pictures or for obtaining unusual effects. Argus adapter ring size 30 mm. fits the Model Argoflex lens mount.

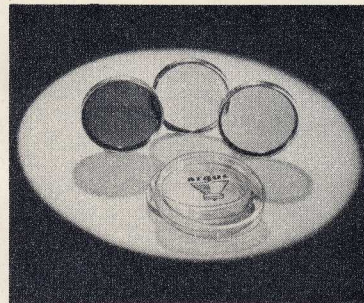

FILTER	PURPOSE
Light Yellow	Produces natural effect and correct tones
Dark Yellow	Emphasizes clouds, reduces haze
Green	Improves detail in foliage, landscapes
Red	Exaggerates sky tones for dramatic effect; also used with infra-red film
Haze	Reduces haze when using either color or black-and-white film
Color	Permits using indoor-type color film outdoors

Use of Argus filters is recommended when taking landscapes, seascapes, distant subjects and mountain scenes because of the improved rendering of sky tones.

Guarantee

Your Model Argoflex camera was thoroughly inspected and tested before it was shipped from our factory, and when purchased from an *Authorized Argus Dealer*, it is fully guaranteed for 90 days from the date of purchase against defects in workmanship or material.

If this camera develops defects in material or workmanship during this period, it will be repaired or replaced (our option) without charge.

This guarantee is void in the event the camera has been damaged through accident, misuse, mishandling or for reasons beyond our control.

IMPORTANT

Authorized Argus Dealers sell new Argus equipment at full list price; used or rebuilt equipment sold at less than list price is not guaranteed by the factory.

Argus, Inc., Ann Arbor, Michigan